


A



ON
OFF
OFF
YAMAHA
MIC VOL
0
1
2
3
4
5
6
7
8
9
10
MIN
MAX
MIC

B



ON
OFF
ON
OFF
YAMAHA
MIC VOL
0
1
2
3
4
5
6
7
8
9
10
MIN
MAX


C

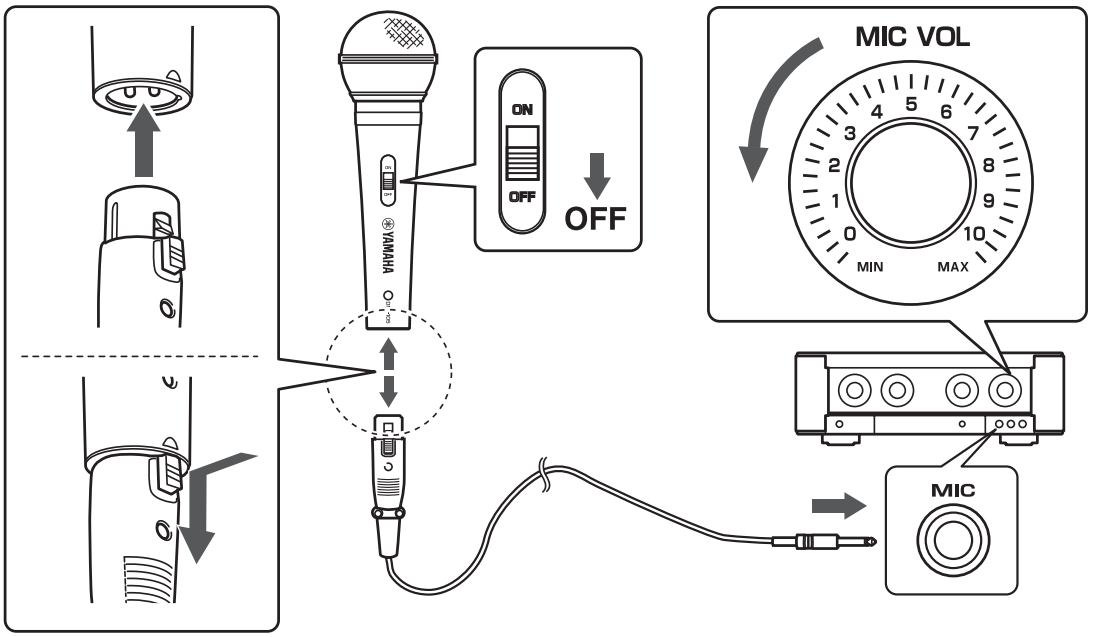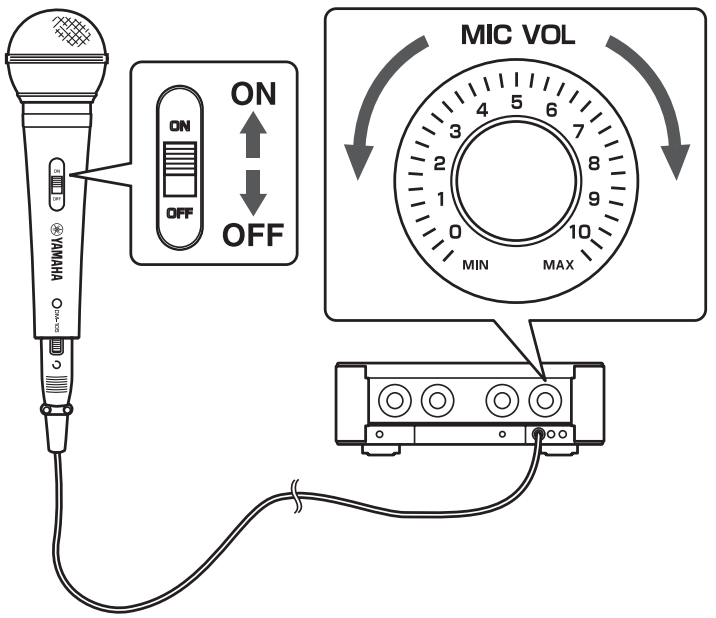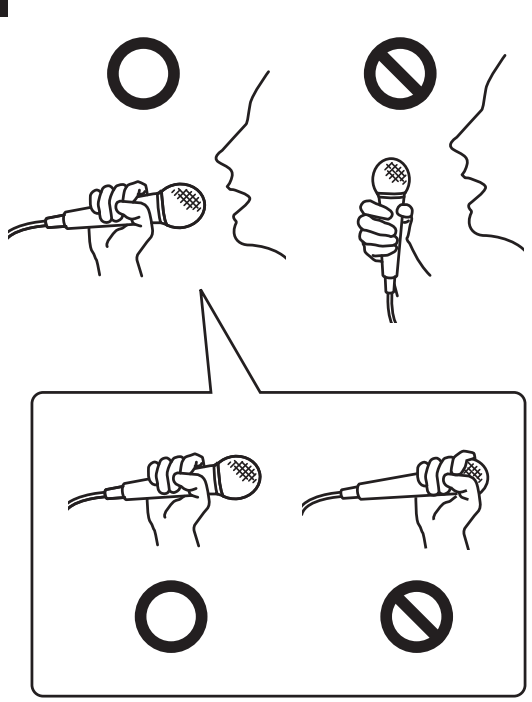


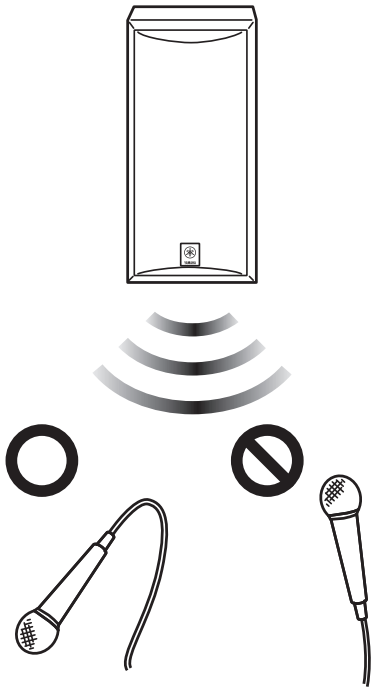


D

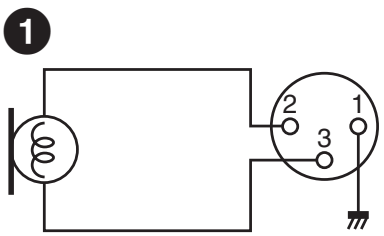
1
2
3

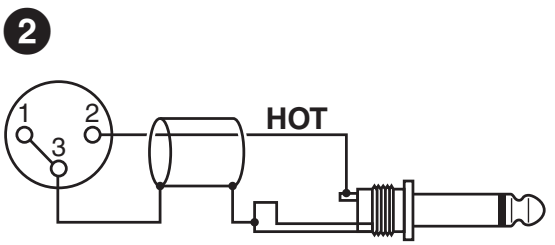
2
1
3
HOT

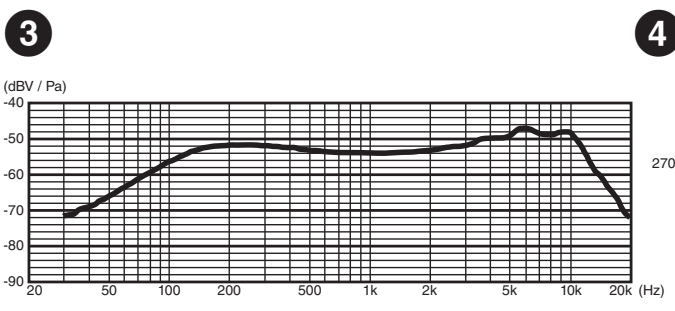
3
(dBV / Pa)
-40
-50
-60
-70
-80
-90
20
50
100
200
500
1k
2k
5k
10k
20k
(Hz)

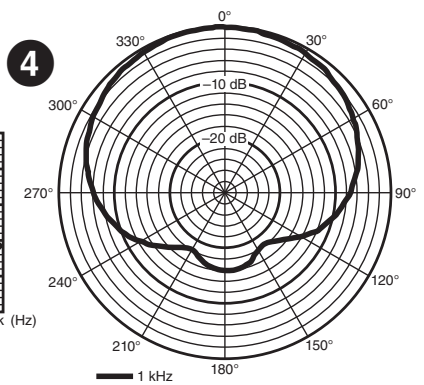
4
0°
30°
60°
90°
120°
150°
180°
210°
240°
270°
300°
330°
–10 dB
–20 dB
1 kHz

English

CAUTIONS

READ THIS BEFORE OPERATING YOUR MICROPHONE.

- To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- Due to the high sensitivity of the cartridge, do not drop it from a high place or apply a strong shock to it.
- To maintain the sensitivity and quality of the sound reproducing, avoid exposing it to moisture, dust, or extreme temperatures.
- Avoid placing this microphone in any of the following locations:
  - Locations that are exposed to extremely high temperature (e.g., near a heater or inside a car), as they may cause damage to this microphone, and/or personal injury.
  - Locations that are exposed to water or close to containers with liquid in them, as entering of liquid or foreign object into the microphone may cause damage to this microphone.
- Keep this product out of the reach of children.
- Do not use force on the switch or cable of the microphone.
- When disconnecting the microphone cable, grasp the connector and do not pull the cable.
- Since the microphone consists of precise parts, do not attempt to modify or fix it. Contact qualified Yamaha service personnel when any service is needed. Do not disassemble the microphone for any reasons.
- Do not clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- Also please refer to the owner's manual of the component to be connected to this microphone.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

Accessory

Microphone Cable: 5 m (16.4 ft) × 1

A Connecting and Disconnecting the Microphone Cable

- Before making the connection, make sure that the microphone and the component (e.g., amplifier) are switched off.
- Insert the connector into the microphone socket. Align the key on the connector with the groove in the microphone, and then push the connector into the microphone until it clicks.
- Lower the volume of the component (e.g., amplifier) before connecting the microphone.
- To disconnect the cable from the microphone, pull the connector away from the microphone while depressing the latch lock.

B How to Use

- Set the switch to ON when using the microphone, and set it to OFF when not in use.
- When using the microphone, do not cover any part of the grille with your hand to ensure sound quality.

C Hints

- In order to prevent howling:
  - Lower the volume.
  - Place this microphone so that it is not pointed to the speaker and that there is a sufficient distance between the microphone and the speaker.
  - Do not cover the lower part of the grille with your hand.
- Positioning the microphone close to the sound source causes the so-called proximity effect (a boost in the low-frequency response). This phenomenon can be used to create a richer and warmer bass sound.

D ❶ ❷ Wiring
❸ Frequency Response
❹ Polar Pattern

Specifications

Type	Dynamic Microphone
Polar Pattern	Unidirectional
Frequency Response	60 Hz – 15,000 Hz
Sensitivity / 2.83 V, 1 m	-54 dB ± 3 dB (0 dB = 1 V/Pa, 1 kHz)
Output Impedance	500 Ω ± 30 % (1 kHz)
Connector	3-pin XLR-M type
Cable	ø6 mm × 5 m with XLR-F type connector and 6.3 mm plug
Dimensions (Microphone only) (max. diameter × length)	ø51 × 169 mm (2 × 6-5/8 in)
Weight (Microphone only)	220 g (7.80 oz.)

* Specifications are subject to change without notice.

Information for users on collection and disposal of old equipment:



This symbol on the products, packaging, and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.
For proper treatment, recovery and recycling of old products, please take them to applicable collection points, in accordance with your national legislation.

By disposing of these products correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.
For more information about collection and recycling of old products, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

For business users in the European Union:

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union:

This symbol is only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

(weee_eu_en_02)